

GARDEN STATE TILE

Together We Can Design For Life

LEDGER STONE



Ledger Stone:
Natural slate, quartzite and marble ledger stones
bring depth and texture to any design palette.



Colors and patterns at a glance



Beachwalk



Carbon



6 x 24 in / 15 x 60 cm Ledger Stone Carbon Split Face Slate Panel



6 x 24 in / 15 x 60 cm Ledger Stone Carbon Split Face Slate

Panel 6 *Natural Stone*

Ledgerstone, *Beachwalk*



6 x 24 in / 15 x 60
cm 5004-0004-0



6 x 18 in / 15 x 45
cm Assembled
Corner 5004-0006-0

Ledgerstone, *Carbon*



6 x 24 in / 15 x 60
cm 5004-0008-0



6 x 18 in / 15 x 45
cm Assembled
Corner 5004-0010-0



6 x 24 in / 15 x 60 cm Ledger Stone Beachwalk Split Face Quartzite Panel



Unmatched elegance and
unparalleled perfection.





Technical Performance
Avant-garde design and
attention to detail.

Ledgerstone, *Corner Panel Installation*

Substrate Requirements:

For best bonding results, the surface should be clean, dry, and have open pores for adhesion. Smooth, non-porous or polished surfaces should be avoided to adhere to. Interior installations of LEDGER STONES could be installed on gypsum drywall or exterior grade plywood for up to 10' in height. Cement board is recommended for interior walls exceeding 10' in height. For exterior applications, LEDGER STONE can be installed directly onto brick, masonry block, cured concrete, or cement board.


Mortar Recommendation:

For all installations, a polymer modified mortar is recommended. For commercial installations, as well as exterior installations over 10' in height, a polymer modified mortar with a latex additive is strongly recommended.


Corner Panel Installation:

Please follow below steps to achieve a natural hand stacked appearance:


1. Corner panels are used to finish outside corners with natural edges. Inside corners should be mitered plain panels.

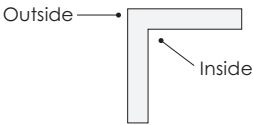


2. Corner panels have natural rock faced ends on both sides and are shaped as shown. They are 24" long and 6" high with approximately one square feet coverage.

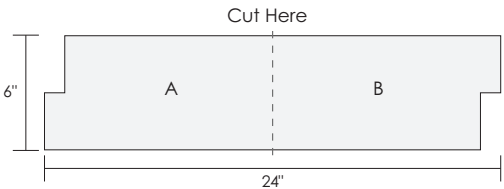


3. Corner panels should be cut into two pieces at desired lengths and finger joined around the outside corner as shown. One corner panel is needed to complete one linear foot of outside corner.

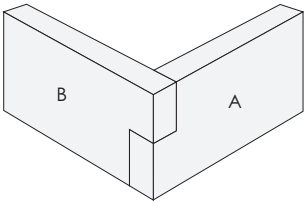

4. Continue installation by removing one staggered end of the plain ledger stone piece and place adjacent to the installed corner piece to continue row.

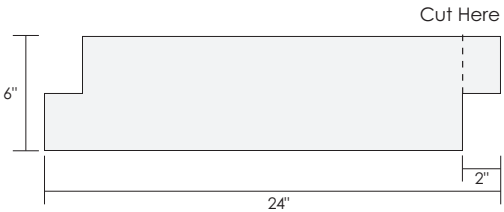

5. Alternate the size of the corner pieces to help stagger the joints. Do not stagger in a brick fashion, but randomly alter the size to conceal the joint patterns.

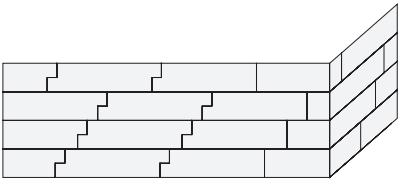



OUR SHOWROOMS

NEW JERSEY

Dover
Princeton
Wall
West Berlin
Wyckoff

PENNSYLVANIA

Bethlehem
Lancaster
Philadelphia
Warminster

SOUTH CAROLINA

Charleston
Columbia

GEORGIA

Savannah

GARDEN STATE TILE

Together We Can Design For Life

GSTILE.COM    @GARDENSTATETILE1957